

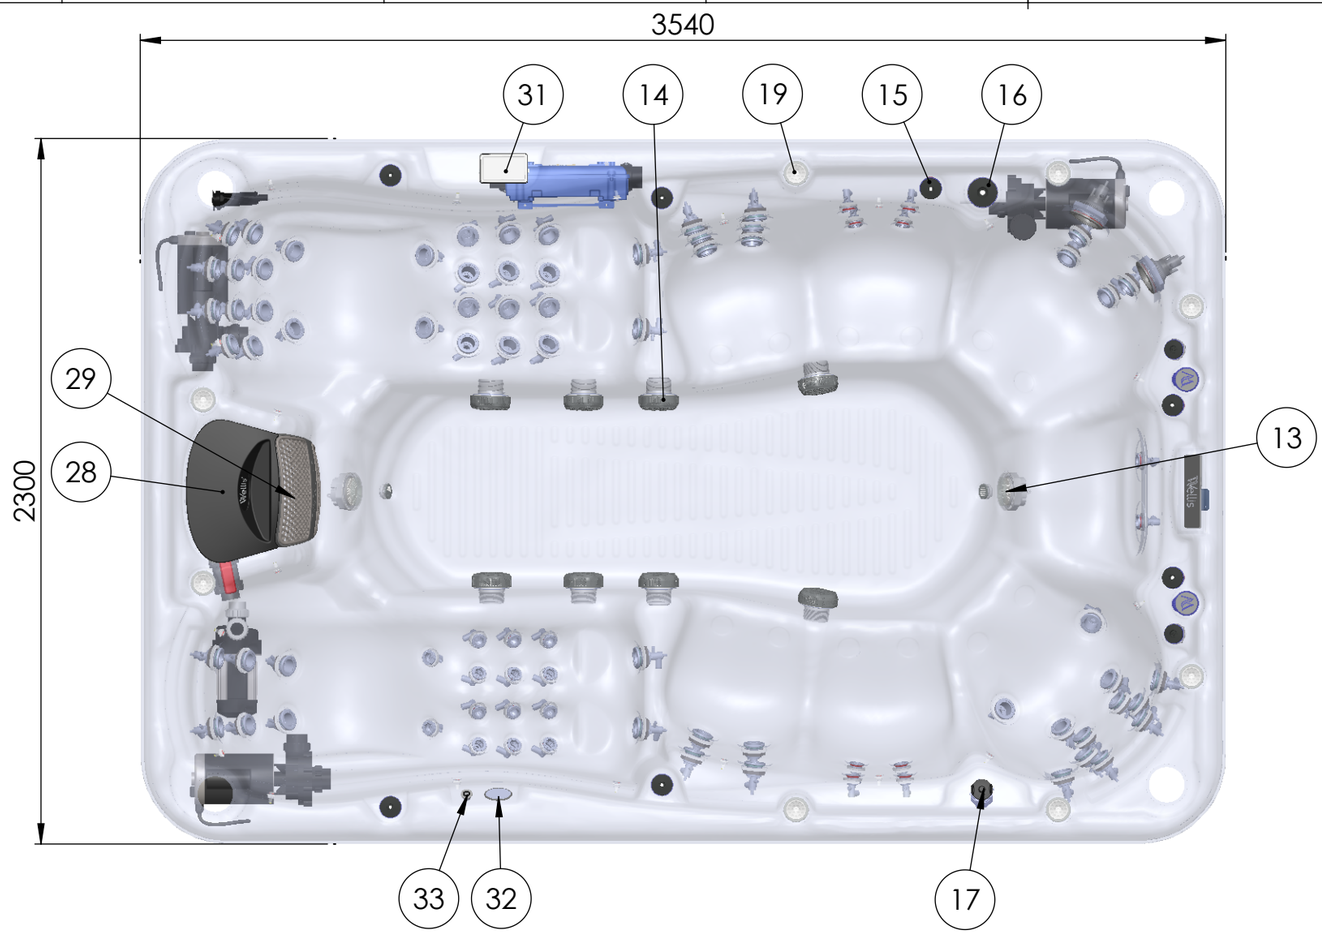


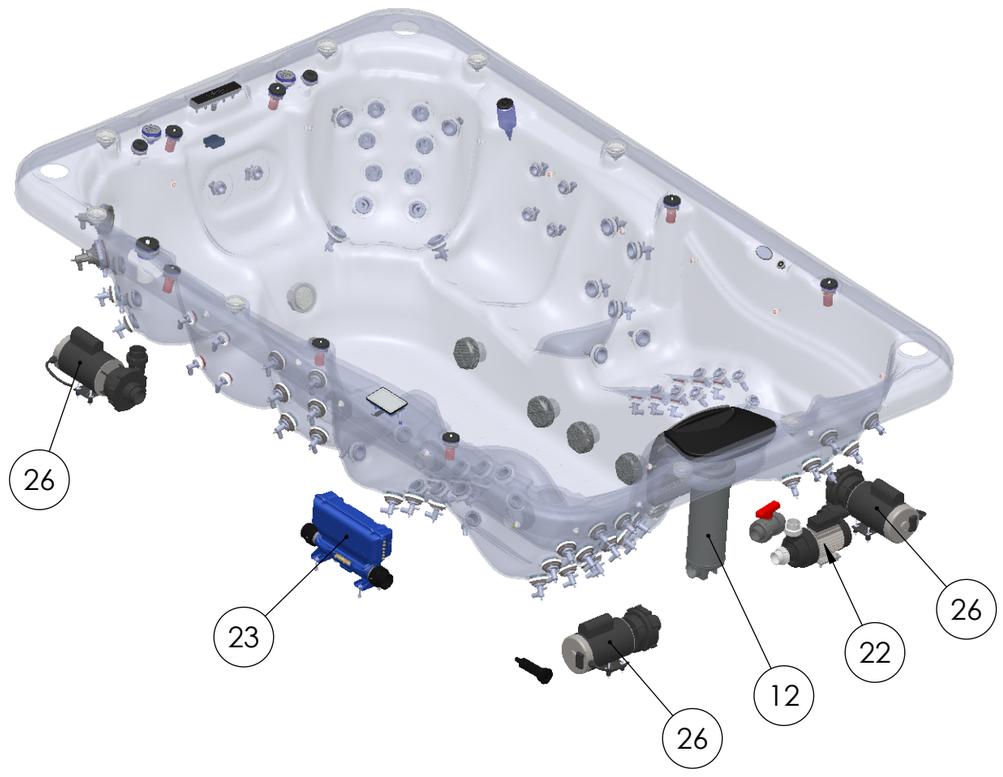

Tétel	Cikkszám	IFS megnevezés	Db
1	AJ00254	Jet ház 3" V4 1/3	62
2	AJ00290	Alátét jet ház anya önbeálló 3"-hoz V5 3/3	62
3	AJ00289	Jet ház anya önbeálló 3" V5 2/3	62
4	AJ00253	Jet ház 2" V4 1/3	24
5	AJ00287	Jet ház anya önbeálló 2" V5 2/3	24
6	AJ00288	Alátét jet ház anya önbeálló 2"-hoz V5 3/3	24
7	AJ00255	Jet ház 5" V4 1/3	2
8	AJ00261	Jet ház anya önbeálló 5" V4 2/3	2
9	AJ00258	Alátét jet ház anya önbeálló 5"-hoz V4 3/3	2
10	AJ00291	Jet ózon tömítéssel V2	2
11	AJ00246	Önbeálló alátét	2
12	AKU1830	Szűrőház úszós 50 sqf szűrőbetéthez	1
13	ACM0531	Világítás ház víz alatti nagy RD	2
14	AKU2607	Beszívófej 2" RD tömítéssel	8
15	AKU1892	Dúsító ház 33 átlátszó V2	7
16	AKU1891	Vízirányváltó ház 60 átlátszó V2	1
17	AM00744	Aromaterápia ház pumpás 10 CMP	1
18	AKU1893	Csap ház 33 átlátszó V2	2
19	AKU0056	Pohártartó átlátszó RD	8
20	AKU2647	Led ház tömítéssel	20
21	AKU2219	Anya led házhoz	20
22	ACM0951	Motor 60Hz keringető 1100W (WBE150)	1
23	ACM0853	Vezérlő IN.YE-5 Gecko (4Kw) 60Hz	1
24	ABE0099	Idom 60-48 szűkítőbetét	2
25	ABE0506	48-as golyóscsap	1
26	ACM0734	Motor 60Hz hidro 2200W (56WUA300-I)	3
27	AKU0084	Ürítő ház 20 medencéhez menetes véggel V2	1
28	AKU1833	Skimmer Tető szürke Wellis (Gateway)	1
29	AKU1835	Skimmer ház világos szürke (LVJ)	1
30	ACM0890	Wifi vevő in-touch 2 Gecko USA 60Hz	1
31	ACM0912	Kezelő IN.K1000 V2	1
32	ACM0762	Kezelő AUX panel 4 gombos Gecko	1
33	ACM0763	Kezelő AUX panel 1 gombos Gecko	1
34	ACM0874	Hangszóró 2 utas 3" Aquatic	4
35	ACM0849	Mélynyomó 288W (AQ-SWP8-2)	1
36	ACM0998	IN.STREAM-2 gyorscsatlakozóval	1
37	ACM0802	Led vezérlés Prow USA	1

30 mA-s életvédelmi relé telepítése szükséges

Full-cabinet

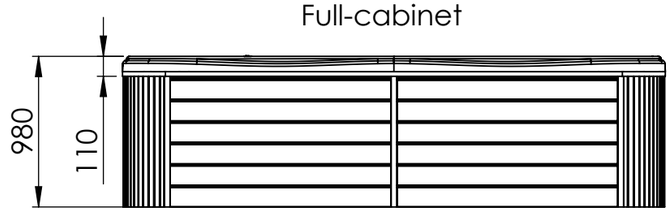


Termékcsalád: **USA Life**

Sheet name: **Olympus Life_USA_HUN**			Projection	Wellis Magyarország Zrt.
File name: **FJ_WU00039_HUN_ENG_Olympus Life USA_medence**				
Medence sz, h, m: **3540x2300x980 mm**	Elekt. ig. min.: **240V - 40A - 60Hz** / Elekt. ig. teljes: **240V - 60A - 60Hz**			
1 személy ~75 kg	Medence súly: **900 kg**		Vezérlő: **GECKO YE-5 (4kW) +K1000**	
Vízkiszorítás: **675 kg**	Peremmagasság: **110 mm**	Approved by: **Frankó Csaba**	Pr. No: / Fe. No:	Number: **WU00039** **C**
Minimum víz: **2331 liter**	Created: **2024. 08. 01.**	Drawer: **franko.csaba - 2024. 08. 01. 11:27:57**	**A3**	**M 1:50** **page 1 / 4**

File path - - - - > C:\WELLIS_PDM\Belso_PDM_doksik\Új_Dokumentum_rendezes\FJ_WM_100\

TELEPÍTÉSI INSTRUKCIÓK

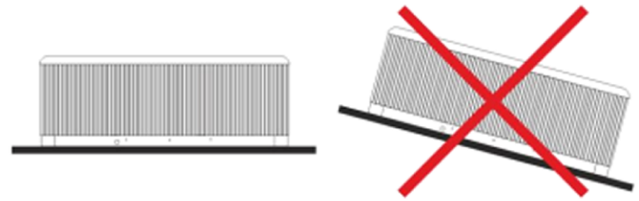

A medence telepítését, bekötését, a tápvezeték cseréjét és bármilyen javítását csak szakember végezheti!
A megadott méretek tájékoztató jellegűek, a medence gyártási technológiájából adódóan eltérhetnek a rajzon feltüntetett értékektől.
Csak abban az esetben helyezzük üzembe a medencét, amennyiben a kismegszakító beépítéséről a beépítő érintésvédelmi nyilatkozatot tesz és azt a szervízes kollégának átadja.

1. Általános telepítési instrukciók

A medence beállításához elengedhetetlenül fontos a **szilárd, vízszintes alap (maximum 0.5% lejtés)**. Győződjön meg, hogy a burkolat vagy az alap megfelelően támasztja-e a medencét.
Tudnia kell ehhez a burkolat maximum terhelési kapacitását. Forduljon szakképzett építészeti szakemberhez vagy statikus mérnökhöz. A medence súlyának, tartalmának és részeinek megállapításához lásd a medence adattáblázatát. Ez a súly négyzetméterenként ne haladja meg a számított statikus kapacitást, máskülönben súlyos sérüléseket okozhat a medencében és az aljzatban. A medence körül **60 cm helyet kell biztosítani szervizeléshez**, ha ez nem megoldható szervízelés esetén előre jelezni kell, és a medence hozzáférhetőségét biztosítani kell! A medence kifolyó felőli oldalán célszerű vízösszefolyót kialakítani. Ennek célja az esővíz és a kifröccsenő víz elvezetése a medence környékéről, illetve, ha a medencét az alsó kivezető nyílásnál engedik le, el tud folyni a víz.

a. Beltéri elhelyezés

A medence beltérben való elhelyezése esetén vegye figyelembe a következő speciális követelményeket: Az aljzatburkolatnak megfelelő vízelvezetővel kell rendelkeznie, hogy a víz ne gyűljön össze a medence körül. Ha a medencének új helyiséget alakít ki, **padlóvíz-elvezető (padlóösszefolyó) kiépítése javasolt** az esetleges károk elkerülése érdekében (víz túlcsordulása, műszaki meghibásodás, stb.).
A **padlóösszefolyó** kiépítésének hiányában a keletkezett károkért Társaságunk felelősséget nem vállal.
Abban a helyiségben, ahol a medence található, jelentősen megnőhet a páratartalom, így a kicsapódó víz, illetve a gombásodás elkerülése érdekében kiemelten fontos a helyiség megfelelő szellőztetése. Tanácsoljuk páramentesítő készülék üzembe helyezését a helyiségben. Az akril nagyon gyorsan elnyeli a hőt a Nap sugaraiból, ezáltal az igen magas felületi hőmérséklettől károsodhat a medence. Ha a medence üvegszerkezetek közé lett helyezve, előzzük meg, hogy a napsugarak közvetlenül az üvegen keresztül érjék a medencét, hiszen úgy a hőmérséklet túl magas lehet.

b. Kültéri elhelyezés

Ha a medencét kültéren helyezi el, javasolt egy minimum 10 - 15 cm vastag vízszintes, vasalt betonfelület készítése. Védelem (medencetető) nélkül ne tegye ki közvetlen napfénynek az üres medencét. Ne feledje, hogy a hosszú ideig tartó napsütés károsíthatja a medence felületét és tartozékait.

c. Süllyesztett

Medence beépítése esetén gondoskodnia kell a medence körüljárhatóságáról, a karbantartási munkák elvégzésének céljából, **ezért egy minimum 60 cm széles szerelőaknát kell kiépíteni a medence köré!** Besüllyesztés esetén csak a medence **akril-perem alatti részét szabad besüllyeszteni**. Ezen feltételek hiányában a medence üzembe helyezése meghiúsulhat! A szerelőaknában esetlegesen felgyülemlő víz elvezetéséről is gondoskodni kell. A szerelőaknának megfelelően kell szellőznie. Ennek érdekében elszívó ventilátor, vagy más egyéb szellőztetés beépítése javasolt. Az esetleges kiemelés költségei az ügyfelet terhelik!

2.Elektromos bekötés

A rögzített vezetékhálózatba egy csak a medencéhez tartozó leválasztó eszközt kell beépíteni, amelyre semmilyen más eszköz nem köthető rá,
és a hálozatban egy 30mA-s életvédelmi relé telepítése kötelező.
Ellenőrizze a termékének típusát. WU00039 Olympus Life USA medence
Nézze meg a termékének a minimális elektromos igényét. 240V 40A 60Hz
Nézze meg a termékének a optimális elektromos igényét. 240V 60A 60Hz
Ezek alapján válassza ki, hogy minimális vagy optimális módon szeretné bekötni a termékét.
Ez alapján válassza ki a szükséges kábel keresztmetszetet.
Elektromos bekötéshez vezeték kábel hossz és keresztmetszet 10m kábelhossz alatt mellékelt táblázatban van feltűntetve.

Szükséges kábel a bekötéshez
6 AWG

- 10 méteres kábelhossz felett kérjük konzultáljon szakemberrel.
- A bekötést minden esetben elektromos szakember végezze.
- Teljes szükséglet: ebben az esetben a hidromasszázs motor és a fűtés egy időben is működhet.
- Minimális szükséglet: ebben az esetben a hidromasszázs motor és a fűtés egy időben nem működhet.
- Az elektromos kábelek bevezetése a tálca kifúrásával és tömszelence beépítésével javasolt. Ajánlott irány a bekötési rajzon feltűntetve. Bekötéshez szükséges kábelhossz: min. 3 méter.
- A bekötés pontos módja mindig egyedileg kerül kialakításra, a medence elhelyezkedésétől és környezetétől függően.


Az elektromos kiépítés (a medence bekötéséhez szükséges vezeték és kismegszakító) a megrendelő feladata. Ezen alkatrészek nem képezik a termék részét, azok beszerzése az ügyfél feladata.
Minden medence saját bekötési rajzzal rendelkezik.
Az elektromos bekötés során csak réz kábelezést alkalmazzon.
Ha egy biztosíték meghibásodik, csak ugyanolyan típusú és technikai paraméterekkel rendelkező alkatrészre cserélje azt.
A készüléket csatlakoztatni kell az épület egyenpotenciálra hozott (EPH) hálózatához is.


Tájékoztatjuk Önöket, hogy alkatrész táblázatunkban szereplő hidromasszázs motorok funkciója eltérhet a jelzéstől.
Ha például az ACM0394 Motor 50Hz hidro 2200W (WP300-II) motor kétszintű sebességgel van feltüntetve, de a gyakorlatban csak egy sebességgel működik, az azért van, mert a hidromasszázs termék a tökéletes masszázsélmény érdekében nagyobb vízmennyiséget igényel. Így a motor csak a maximális sebességen fog működni.

Termékcsalád: **USA Life**

Sheet name: **INFO_HUN**			Projection	Wellis Wellis Magyarország Zrt.
File name: **FJ_WU00039_HUN_ENG_Olympus Life USA_medence**				
Medence sz, h, m: **3540x2300x980 mm**	Elekt. ig. min.: **240V - 40A - 60Hz / Elekt. ig. teljes: 240V - 60A - 60Hz**			
1 személy ~75 kg	Medence súly: **900 kg**		**Vezérlő: GECKO IN.YE-5 (4kW) +K1000**	
Vízkiszorítás: **675 kg**	Peremmagasság: **110 mm**	Approved by: **Frankó Csaba**	Pr. No: / Fe. No:	Number: **WU00039** **C**
Minimum víz: **2331 liter**	Created: **2024. 08. 01.**	Drawer: **franko.csaba - 2024. 08. 01. 11:27:57**	**A3**	**M 1:15** **page 2 / 4**

File path - - - - > C:\WELLIS_PDM\Belso_PDM_doksik\Új_Dokumentum_rendezesi\FJ_WM_100\

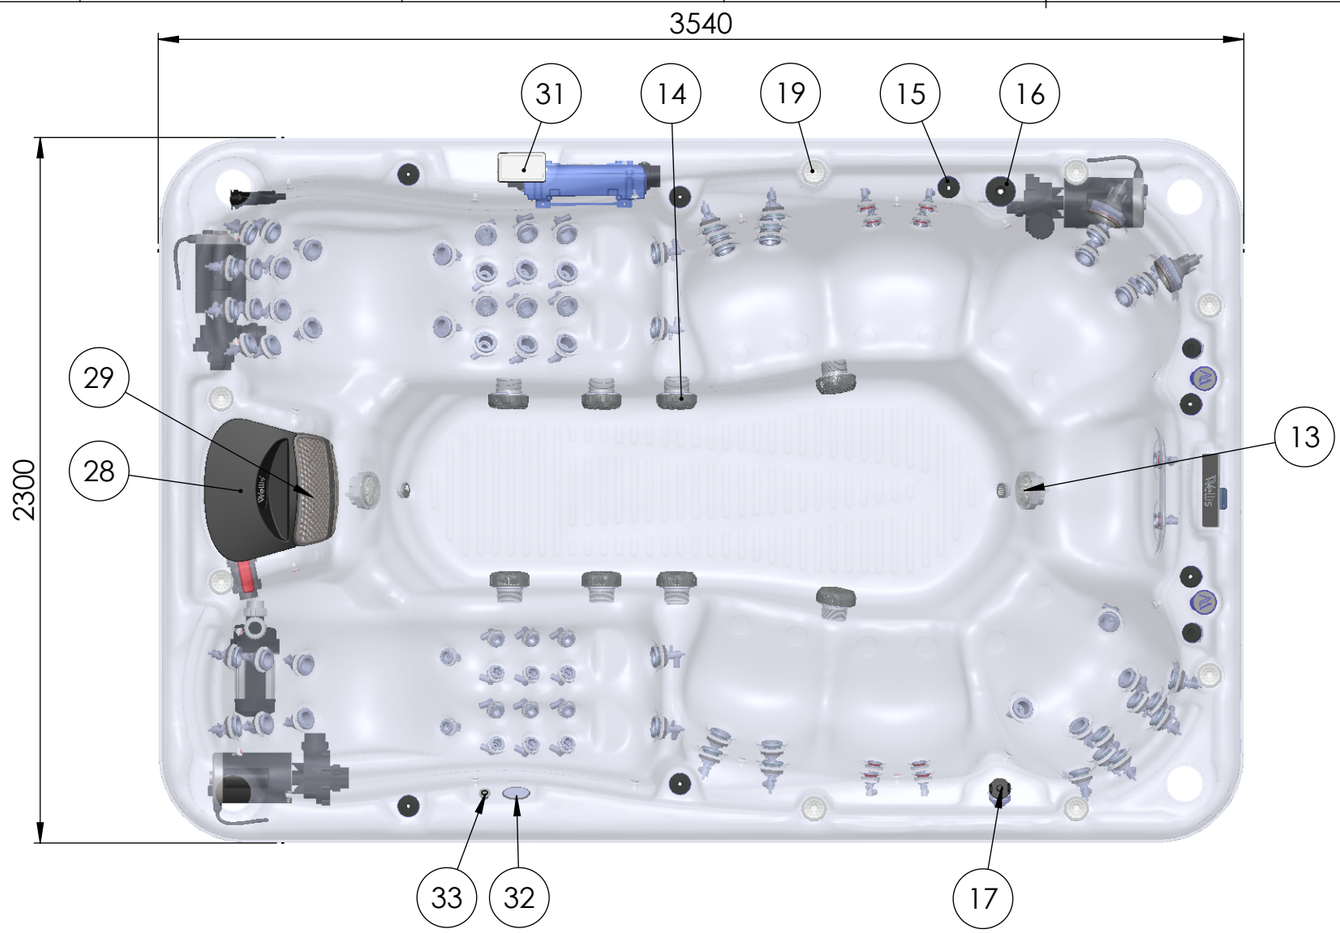


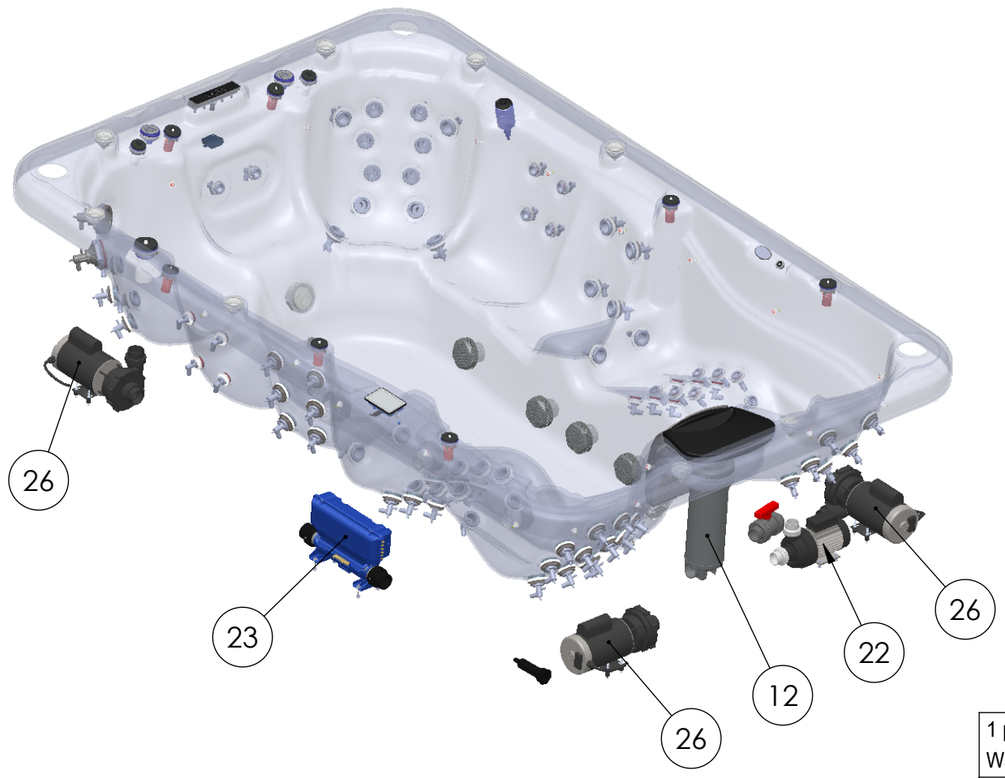

No.	Part No.	Description	Pcs
1	AJ00254	Jet house 3" with sealing V4 1/3	62
2	AJ00290	Washer for washer housing 3" V5 3/3	62
3	AJ00289	Jet housing nut self-aligning 3"	62
4	AJ00253	Jet house 2" with sealing V4 1/3	24
5	AJ00287	Nozzle housing nut self-aligning 2" V5 2/3	24
6	AJ00288	Washer for washer housing 2 "V5 3/3	24
7	AJ00255	Jet house 5" with sealing V4 1/3	2
8	AJ00261	Jet housing nut self-aligning 5"	2
9	AJ00258	Washer jet housing nut self-aligning for 5" V4 3/3	2
10	AJ00291	Jet ozone with sealing V2	2
11	AJ00246	Washer self-aligning	2
12	AKU1830	Filter house for floating 50 sqf filters	1
13	ACM0531	Underwater Light - House RD	2
14	AKU2607	RD Suction 2" with gasket	8
15	AKU1892	Air Regulator - house led lighted V2	7
16	AKU1891	Water Diverter 60 - LED lighted V2	1
17	AM00744	Aromatherapy house	1
18	AKU1893	On-Off tap house 33 transparent V2	2
19	AKU0056	Cup Holder Light lens light bule/transparent	8
20	AKU2647	Led housing with seal	20
21	AKU2219	Nut for ledhouse	20
22	ACM0951	Circulation pump 60Hz 1100W (WBE150)	1
23	ACM0853	Control box In.YF-5	1
24	ABE0099	Reducer - 60.3 Spigot × 48 S	2
25	ABE0506	Ball Valve 48	1
26	ACM0734	Spa Pump 3 HP - One Speed 60 Hz	3
27	AKU0084	Water Drain - 20 RB V2	1
28	AKU1833	Filter House - Skimmer Cover grey with Wellis logo	1
29	AKU1835	Skimmer house light grey	1
30	ACM0890	Wifi in-touch 2 Gecko USA 60 Hz	1
31	ACM0912	Control Panel - IN.K1000 V2	1
32	ACM0762	Control Panel - AUX 4 Button	1
33	ACM0763	Control Panel - AUX One Button IN.K110	1
34	ACM0874	Speaker 3" (2 way)	4
35	ACM0849	Subwoofer 288W (AQ-SWP8-2)	1
36	ACM0998	IN.STREAM-2 with quick connector	1
37	ACM0802	Led control box	1

You must install a 30 mA residual-current device (RVD)

Full-cabinet

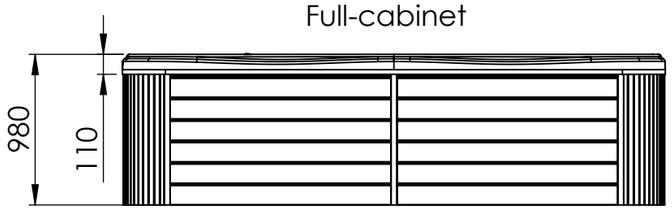


Product family: **USA Life**

Sheet name: **Olympus Life_USA_ENG**			Projection	Wellis Magyarország Zrt.
File name: **FJ_WU00039_HUN_ENG_Olympus Life USA_medence**				
Dimension SPA: **3540x2300x980 mm**	Min. El. needs: **240V - 40A - 60Hz / Opt. El. needs: 240V - 60A - 60Hz**			
1 person ~75 kg	Weight of the SPA: **900 kg**		Control box: **GECKO YE-5 (4kW) +K1000**	
Water disp.: **675 kg**	Rim height: **110 mm**	Approved by: **Frankó Csaba**	Pr. No: / Fe. No:	Number: **WU00039** **C**
Minimum water: **2331 liter**	Created: **2024. 08. 01.**	Drawer: **franko.csaba - 2024. 08. 01. 11:27:57**	**A3**	**M 1:50** **page 3 / 4**

File path - - - - > C:\WELLIS_PDM\Belso_PDM_doksik\Új_Dokumentum_rendezes\FJ_WM_100\

INSTALLATION INSTRUCTIONS

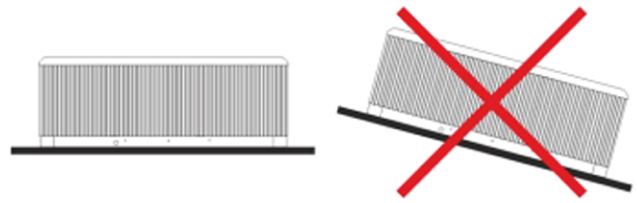

Installation, connection and electrical installation can be done only by professionals!

The given dimensions are for information only, they may differ from reality due to the manufacturing technology of pools.

ATTENTION!

Pools can be installed only when electric schock protection compliance of the installed residual-current device is stated by the installation personnel in written form.

1. General installation instructions

A **solid, level base (maximum 0.5% slope)** is essential for setting up the pool. Make sure the cover or base is properly supporting the pool.
For this, you need to know the maximum load capacity of the cover. Consult a qualified architectural professional or structural engineer. To determine the weight, contents and parts of the pool, refer to the data table of the pool. This weight should not exceed the calculated static capacity per square meter, otherwise it may cause serious damage to the pool and the substrate. **60 cm of space is required around the pool provided for servicing,** if this cannot be done, in the event of servicing, advance notice must be given and access to the pool must be ensured! It is advisable to create a water confluence on the outlet side of the pool. Its purpose is to drain rainwater and splashing water from around the pool, and also to allow the water to flow away in case the pool is lowered at the bottom outlet.

a. Indoors/Basement

In case of placing the pool inside a building take into consideration the following requirements: The base must have a proper drain channel to prevent water collecting around the pool.
Incase a new place is buil for the pool, it is strongly recommended to install a floor drain to prevent damage due to water overflow or mechanical failure, etc.
If no floor drain is installed, our Company takes no responsibility for occuring damages.
Inside the room where the pool is installed, humidity can increase significantly. To prevent precipitating water and the occurance of fungus, proper ventillation of the room is highly recommended.
It is also suggested to install a dehumidifier device in the room. Acryl absorbs heat from the sun rapidly, due to which the pool can suffer significant heat damage. In case the pool is installed between glass structures, please prevent the sunrays to reach the pool directly through the glass, otherwise temperatures can rise too high.

b. Outdoors/Closed terrace

If the pool is installed outdoors, it is recommended to build a horizontal, reinforced concrete base with min. 10-15 cm thickness. Do not expose the empty pool direct sunlight without proper protection (thermal cover on top). Please keep in mind that long term exposure to sunlight will damage the pool and its accessories.

c. Recessed installation

In case of recessed installation a **60 cm wide manhole must be built around the pool** for proper access and servicing.
Only the part of the pool that is **under the acrylic rim** can be recessed. In case these conditions are not met, installation of the pool may fail!
It is appropriate to make the drain channel in the base on the drain side of the pool. Its purpose is to take away splash water around the pool, or drain the released water.
It is also necessary to provide water drainage in the manhole.
The manhole should also ventillate properly. It is recommended to install an exhaust fan or other ventillation device.
If raising the pool from its recessed place is neccessary, the customer is responsible for all related expenses.

2. Electrical installation

You must install a circut breaker dedicated only for the pool, no other devices allowed to connect. You must also install a 30mA residual-current device (RCD).
Check your product type: WU00039 Olympus Life USA spa
Check the minimal electric needs of your product: 240V 40A 60Hz
Check the optimal electric needs of your product: 240V 60A 60HZ
Based on the information above, choose the appropriate cable size for your product.
For electric installation in case of cables not exceeding 10 meters in length, the appropriate cable cross section and length is given in the table on the right.

Necessary cable for connection
6 AWG

- For cable legths exceeding 10 meters please consult a professional!
- In all cases, the electrical installation of the pool has to be done by an electritian.
- In case the optimal energy needs of the pool are met: the Spa pump and heating can work simultainously.
- In case only the minimal energy needs of the pool are met: the Spa pump and heating can not work simultainously.
- Installing the cables is recommended through the bottom cover (tray) by drilling a hole and using a cable gland. Recommended direction is shown on the drawing.
  Min. cable length for installation is 3 m.
- The exact way of electrical installation is always unique, highly dependant on the location and environment of the pool.

Additional electrical installation (cable, circuit breaker and residual-current device) is the customer's responsibility.
These parts are not included in the pool packaging, need to be purchased separately.
Every pool has a dedicated installation drawing.
Make sure that the pool is connected to a 30 mA residual-current device.
Use copper wiring only.
If a fuse fails, replace it only with same type of fuse with same technical parameters.
The device must be connected to the house's Equipotential Bonding Grid.

We inform you that the functioning of Spa pumps listed in the bill of materials on the first page may differ from reality. For example, if 'ACM0394 Spa Pump 3/0.6 HP - Two Speed' pump is listed as two speed, but in reality it only works with one speed, that might be because for the best massage experience a bigger influx of water is needed, thus the pump will work with its highest speed.

Product family: **USA Life**

		Sheet name: **INFO_ENG**		Projection	Wellis Magyarország Zrt.
		File name: **FJ_WU00039_HUN_ENG_Olympus Life USA_medence**			
		Dimension SPA: **3540x2300x980 mm**	Min.El. needs: **240V - 40A - 60Hz / Opt.El. needs: 240V - 60A - 60Hz**		
1 person ~75 kg		Weight of the SPA: **900 kg**		**Control box: GECKO IN.YE-5 (4kW) +K1000**	
Water disp.:	**675 kg**	Rim height: **110 mm**	Approved by: **Frankó Csaba**	Pr. No: / Fe. No:	Number: **WU00039** **C**
Minimum water:	**2331 liter**	Created: **2024. 08. 01.**	Drawer: **franko.csaba - 2024. 08. 01. 11:27:57**	**A3**	**M 1:15** **page 4 / 4**

File path - - - - > C:\WELLIS_PDM\Belso_PDM_doksik\UJ_Dokumentum_rendezes\FJ_WM_100\